


Single projector teaching room instructions

1. The screen should have three options available to you:

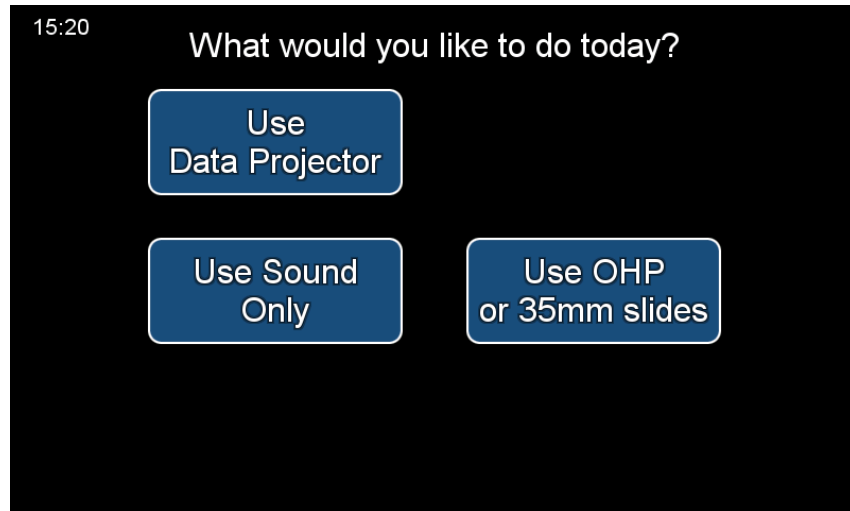


If you want to show a **Powerpoint** Presentation, a **DVD** or **Video**, or something from your **laptop**, press: “**Use Data Projector**”.

2. If the above screen is **not** shown, press the “**Main Menu**” button, and you will be taken there. This button will **always** be at the **top right** of the screen (except on the screen shown above.)



If there are any problems with this unit please call the AV department on 3036

3. Once the system has warmed up, use the **tabs** across the **top** of the screen to select control of image (“**screen**”) or sound source (“**sound**”).

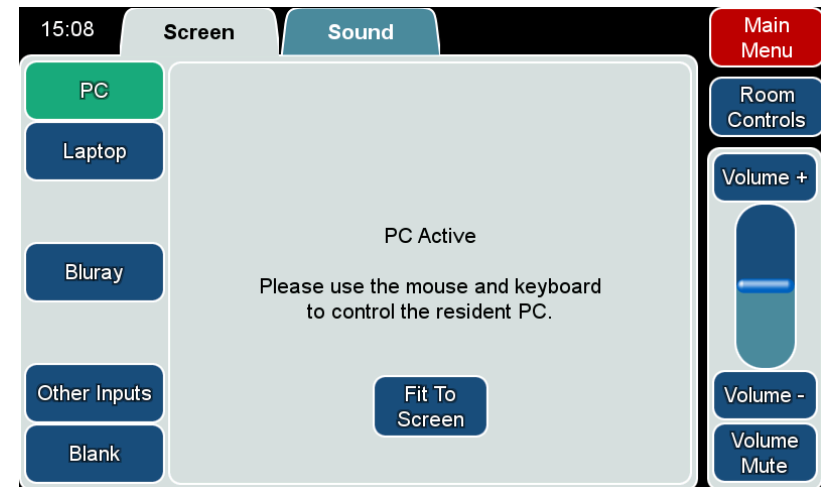

The system will (by default) start by showing you the inbuilt PC, but you can select other sources such as DVD or laptop; or blank the screen/sound; by using the **source buttons** on the **left** of the touch panel.

If the source has any controls, (for example DVD remote control) these will automatically appear when you select that source.

4. At the end of your session, please press the “**Main Menu**” button to clear the projectors and to make it easier for the next presenter to begin.

