

# Derwent JCR AV Instructions

To turn 'ON' please press the buttons marked ON/OFF once, of the device you want to use. These are on the left hand side in the box marked 'Display'

If you want to turn 'ON' the Projector press the button marked 'Proj ON/OFF' then please wait for the Projector to warm up. The screen can be lowered using the screen switch which is located on the rail on the wall.



If you wish to use the Plasma then press the button marked 'Flat Panel ON/OFF' once.

The buttons on the right are for selecting what you want to view eg 'Tuner' to watch Freeview. There is no Remote Control and Channel Selection can be done on the front of the Freeview Box.

Repeatedly pressing the buttons randomly will not make it work any quicker, and will probably confuse the system and result in the Projector or Plasma TV not switching on at all.

The key is please be patient and let the devices switch on in their own time.

**IF YOU MOVE THIS CABINET YOU WILL DISCONNECT THE CABLES AND NOTHING WILL WORK.**