









The TIMFIE sampler


a new tool for time averaged, quantitative, determination of whole water pesticide concentrations

Time Integrating, Micro Flow, In-line Extraction (TIMFIE) sampler

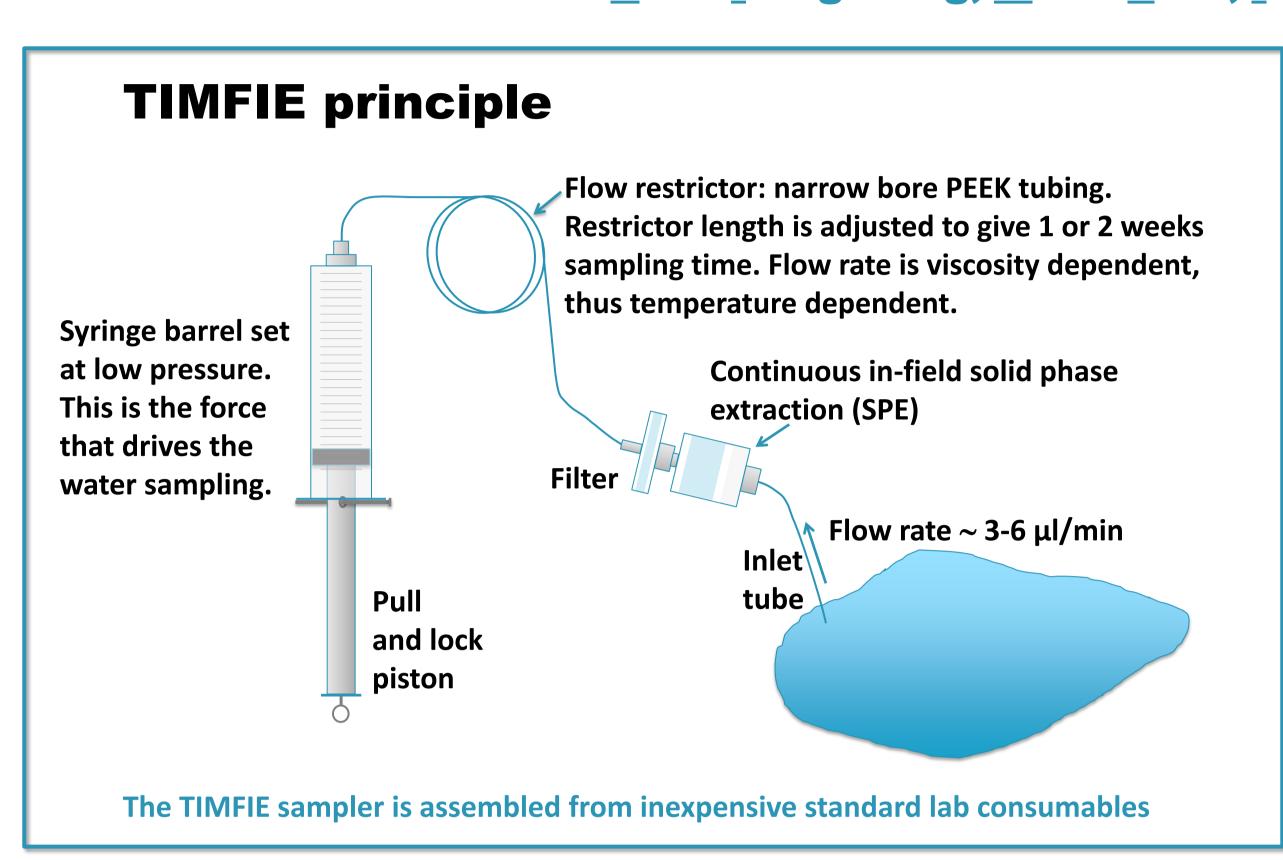

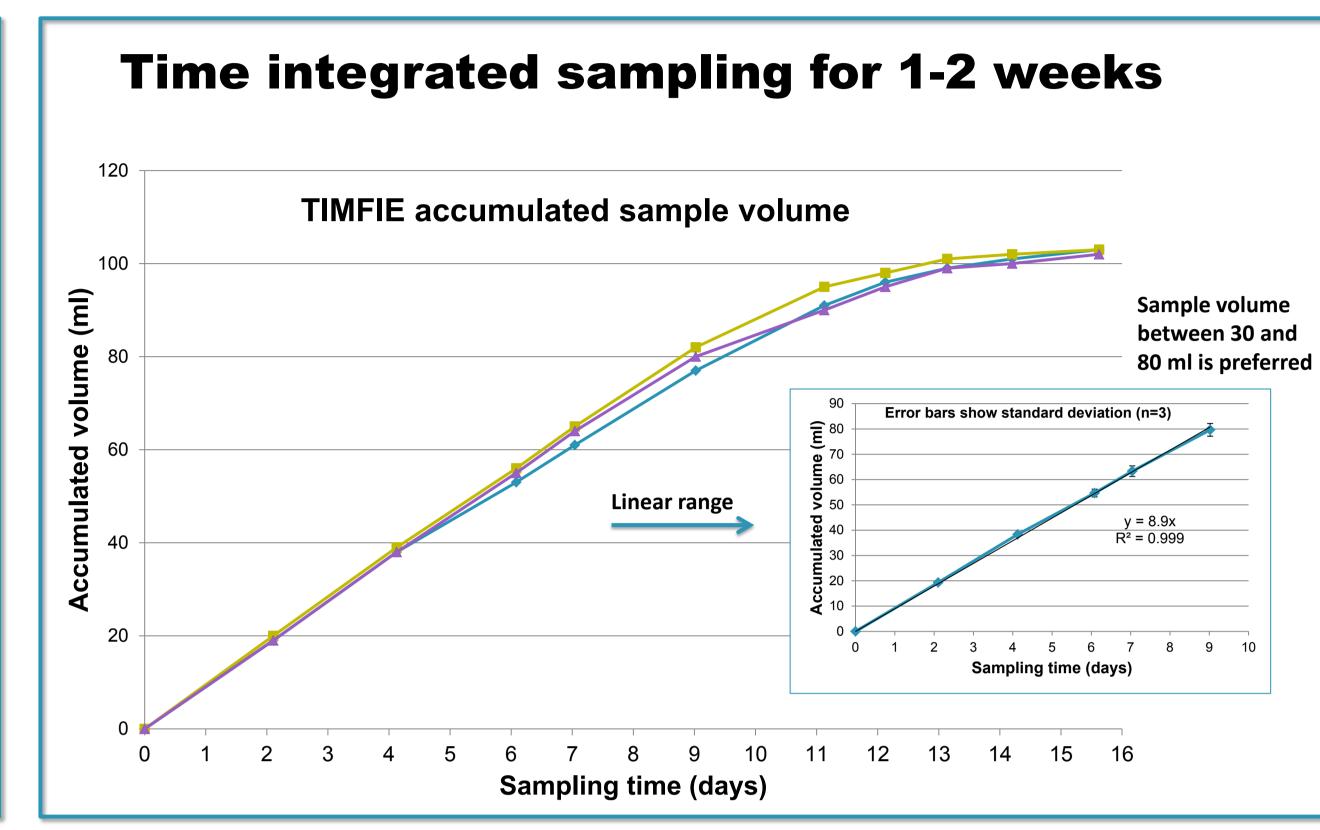

Exact sample volume Quantitative analysis

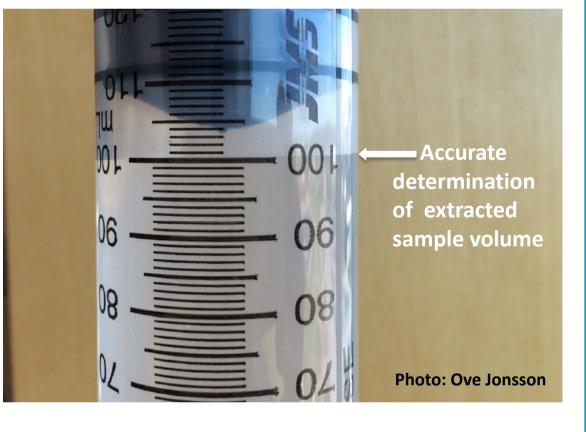

Sample volume will vary between weeks and locations, but always be exact. Typical error in volume read is less than 2%.

Flexible extraction system




- ✓ Traditional solid phase extraction
- ✓ Method development and validation according to established procedures
- ✓ Small format in closed flow system
- ✓ Stack cartridges in series to extract different compound classes
- ✓ Minimized solvent consumption
- ✓ Simple, inexpensive shipping and storage
- ✓ Rational internal standard (IS) addition

Low-tech, low cost



Field application, example

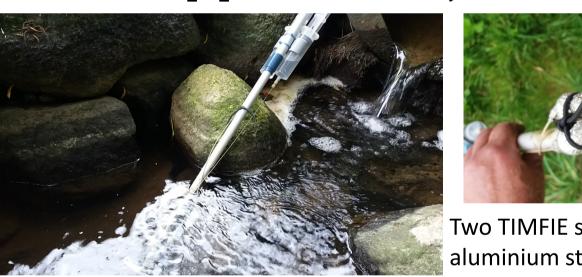




Method and validation


- Pesticide recoveries determined from spiking in several different natural waters, at different concentrations
- > 72 pesticides currently validated with LC-MS/MS
- Field validation comparing TIMFIE with ISCO sampling ongoing
- Sample prep: IS addition > wash > dry > elute with MeOH and acetone > evaporate > reconstitute in buffer > LC-MS/MS
- IS mixed with water in SPE cartridge void volume, interact with matrix components
- Methods based on minimum 30 ml sample volume
- LOD's and LOQ's typically 10 times lower than routine method¹
- Approximately twice the number of pesticides detected with TIMFIE sampling compared to routine method¹

¹ Jansson C. and Kreuger J., J. AOAC Int., **2010**, Vol 93, No 6, P 1732

Duplicate field sampling 156 data pairs, sample A vs sample B (µg/l)

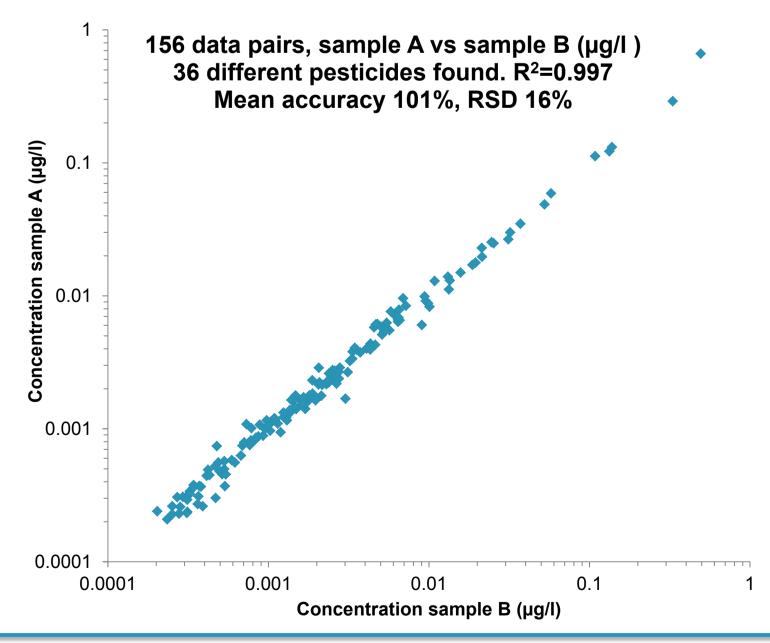

TIMFIE vs grab sampling

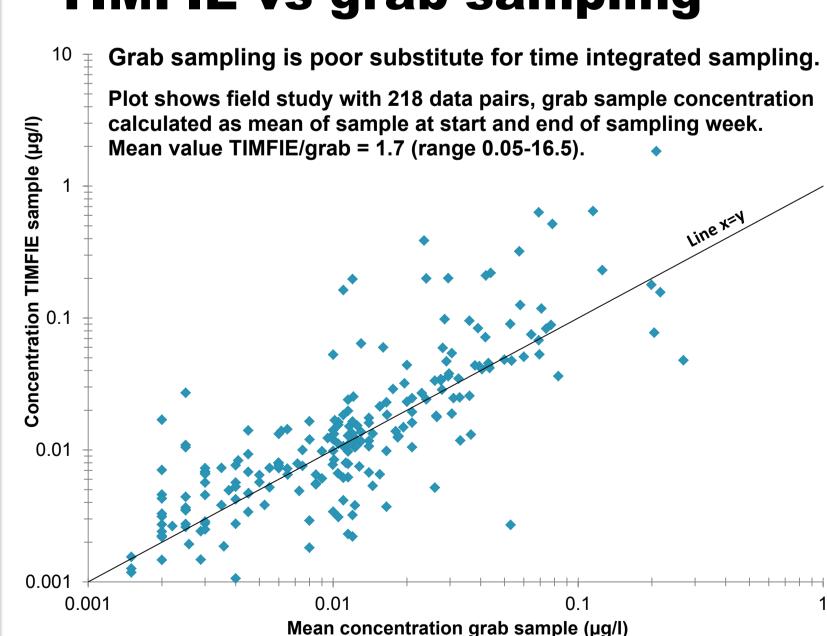

Summary

- > TIMFIE is an "active" and quantitative new sampling technique.
- > It can be adjusted to enable time averaged sampling for up to two weeks.
- > A well known sample volume is pumped through a closed SPE system with accurately validated analyte recoveries.
 - **▶** Whole water concentrations of a range of pesticides are determined.

TIMFIE sampling should <u>NOT</u> be mixed up with passive sampling techniques!